


Modalità di utilizzo
Mode of operation
DECO 1A

Leggere attentamente prima dell'installazione e prima dell'uso
Please read before installation and use




Modalità di utilizzo

1. Visionare il manuale istruzioni del compressore
2. Connettere lo stabilizzatore di pressione all'uscita aria del compressore
3. Connettere il tubo di mandata aria del nebulizzatore allo stabilizzatore di pressione
4. Versare il liquido sanificante diluito in acqua distillata nel contenitore del nebulizzatore (1 lt Sanibact in 25 lt d'acqua)
5. Connettere il compressore alla linea elettrica
6. Posizionare la leva di accensione del compressore su "AUTO"
7. Iniziare il trattamento
8. Utilizzare una mascherina di protezione durante l'applicazione
9. Aerare il locale per 10/15 minuti dopo il trattamento

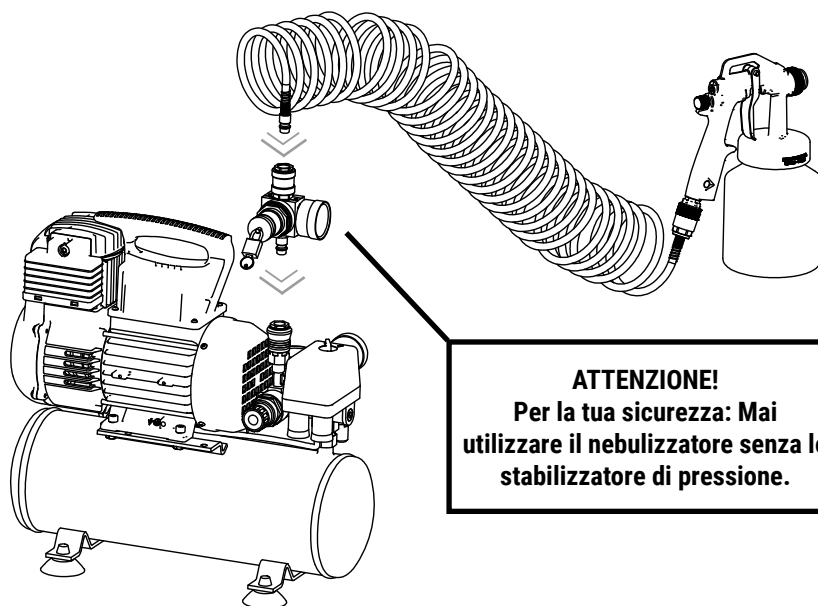

Mode of operation

1. Read the air compressor instruction manual
2. Connect the pressure stabilizer to the compressor air-outlet
3. Connect the air tube to the pressure stabilizer
4. Fill the fogging device tank/canister with pre-mixed sanitization liquid (1 lt Sanibact into 25 lt distilled water)
5. Connect the compressor to the electricity line
6. Turn the compressor start lever to "AUTO"
7. Start the sanitization work
8. Wear a protection mask during the application
9. Ventilate the room for 10/15 minutes after the treatment

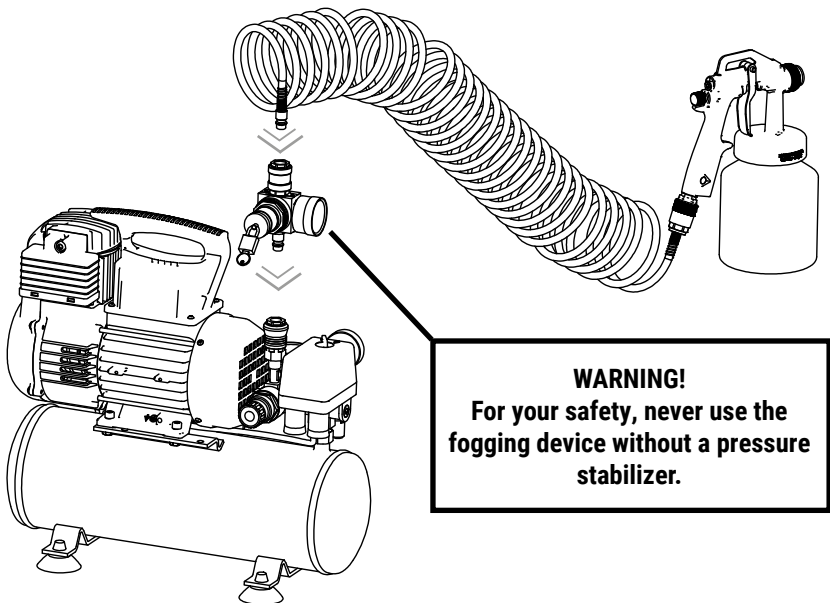



Via delle Tezze, 20/22
36070 TRISSINO (VI)
Italy

phone +39 0445 962000
info@gentilinair.com
www.gentilinair.com



50101013